


**THANK YOU**  
for purchasing this product



### REGISTER YOUR PURCHASE

 [registeryourninja.co.uk](http://registeryourninja.co.uk)

 Scan QR code using mobile device

### RECORD THIS INFORMATION

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_  
(Keep receipt)

Store of Purchase: \_\_\_\_\_

### TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60 Hz

Watts: 1450W

**SharkNinja Europe Limited,**  
3150 Century Way,  
Thorpe Park, Leeds,  
LS15 8ZB, UK  
[ninjakitchen.co.uk](http://ninjakitchen.co.uk)

**SharkNinja Germany GmbH,**  
Rotfeder-Ring 9,  
60327 Frankfurt am Main,  
Germany  
[ninjakitchen.eu](http://ninjakitchen.eu)

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark in the United Kingdom of SharkNinja Operating LLC.

© 2024 SharkNinja Operating LLC  
PRINTED IN CHINA

GR101UK\_IB\_MP\_231201\_Mv1



@ninjakitchenuk





# NINJA

**NINJA SIZZLE GRILL AND FLAT PLATE**  
GR101UK | Instructions



## IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE

	Read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

**⚠ WARNING** To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- 1 To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- 2 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 3 Keep the appliance and its cord out of reach of children. **DO NOT** allow children to play with or use the appliance. Close supervision is necessary when used near children.
- 4 This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Misuse may cause injury.
- 5 To reduce the risk of fire, **DO NOT** place on or near a hot gas or electric burner or in a heated oven.
- 6 Ensure the surface is level, clean and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
- 7 **ALWAYS** ensure the appliance is properly assembled before use.
- 8 When using this appliance, provide at least 6 inches (15cm) of space above and on all sides for air circulation.
- 9 **DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- 10 **NEVER** connect this appliance to an external timer switch or separate remote-control system.
- 11 To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid.

 
# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

- 12 **DO NOT** use the appliance if there is damage to the power cord or plug. Regularly inspect the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
- 13 **NEVER** use socket below worktop surface.
- 14 **DO NOT** place appliance and let cord hang over edges of tables, worktops or touch hot surfaces.
- 15 Only use recommended accessories included with this appliance or authorised by SharkNinja. The use of accessories or attachments not recommended by SharkNinja may cause a risk of fire or injury.
- 16 Before placing any accessory on the grill, ensure they are clean and dry.
- 17 **DO NOT** move the appliance when in use or when hot oils and hot liquids are in the product
- 18 **DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven gloves and use available handles and knobs.
- 19 **DO NOT** touch accessories during or immediately after cooking. The grill plates become extremely hot during the cooking process. Avoid physical contact while removing these from the appliance. To prevent burns or personal injury **ALWAYS** use care when using the product. Recommend use of long-handled utensil and protective hot pads or insulated oven gloves.
- 20 **DO NOT** use this appliance for deep-frying.
- 21 To prevent possible illness, **ALWAYS** use a food thermometer to check that your food is cooked to the recommended temperatures.
- 22 Should a grease fire occur or the unit emits black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.
- 23 Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
- 24 To disconnect, turn unit to "OFF," then unplug from socket when not in use and before cleaning.
- 25 Allow to cool before cleaning, disassembling, putting in or taking off parts, or storing.
- 26 **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 27 The supply cord cannot be replaced. If the cord is damaged the appliance should be responsibly disposed of as electronic waste.
- 28 Please check online at [ninjakitchen.co.uk](http://ninjakitchen.co.uk) for the most up to date version of this instruction booklet.
- 29 Cleaning and use maintenance shall not be done by children.

## SAVE THESE INSTRUCTIONS.

# GETTING TO KNOW THE NINJA SIZZLE GRILL AND FLAT PLATE

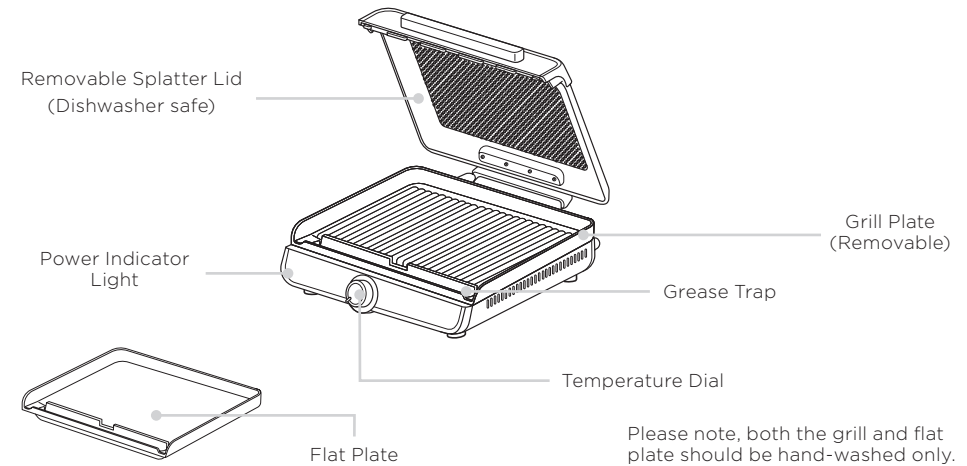

Please note, both the grill and flat plate should be hand-washed only.

To order replacement or additional parts and accessories, visit [ninjakitchen.co.uk](http://ninjakitchen.co.uk)

## BEFORE FIRST USE

- 1 Remove and discard any packaging material, stickers and tape from the unit.
- 2 Remove all accessories from the package and carefully read the manual before use. Please pay particular attention to operational instructions, warnings and important safeguards to avoid any injury or property damage.
- 3 Wash the grill and flat plate with hot soapy water and dry thoroughly. **NEVER** submerge the main unit in water.
- 4 We recommend turning the unit on and running it on 260°C for 10 minutes without adding food. Make sure the area is well ventilated. This removes any packaging residue and odour traces that may be present. This is completely safe and not detrimental to the performance of the grill.

## HOW TO HAVE A LOW SMOKE EXPERIENCE

Always use the recommended grill settings. Our chef-designed temperature settings maximise grill flavours and textures while minimising smoke.

160°C	190°C	200°C	260°C
When using thicker barbecue sauces	Frozen meats	Hotdogs Pancakes Fried eggs Cheese toastie	Veggies Fruit Fresh/Frozen seafood
	Marinated proteins or proteins with sauce		
	Bacon		
	Steaks		
	Chicken		
	Salmon		

Applying oil to food or the grill or flat plate can improve nonstick performance during cooking. We recommend using oils with high smoke points. For best results, Sunflower, Refined Coconut, Avocado, Vegetable, or Rapeseed oils are recommended. Olive Oil, Butter, Margarine, or aerosol cooking sprays are **NOT** recommended.

## COOKING WITH THE NINJA SIZZLE GRILL AND FLAT PLATE

- 1 To install the grill or flat plate, position it over the base with the grease trap toward the front. Place the plate down ensuring the sides align with the exterior of the base.
- 2 Make sure the unit is plugged in, then turn the dial to the desired temperature. The power indicator light will illuminate.
- 3 Allow the grill to preheat with the lid closed for 7 minutes before cooking.
- 4 When preheat is complete, open the lid and place ingredients on the grill plate.
- 5 Once ingredients are cooked to satisfaction, remove from the grill and turn the dial until it clicks into the "OFF" position. The power indicator light will turn off.
- 6 To remove the grill or flat plate for cleaning, ensure the dial is in the "OFF" position, and the unit is unplugged and has had sufficient time to cool. Open the lid and lift the cooking plate straight up by grabbing the vertical walls along the edge of the cooking surface.

**NOTE:** Ninja Sizzle Grill and Flat Plate can be used with the lid open or closed.

## INSTALLING AND REMOVING THE SPLATTER LID

- 1 After allowing the unit to cool, remove the lid by opening it until it is approximately vertical (Figure 1). Then lift the lid straight up out of the hinge base.
- 2 To install the lid, hold it vertically with the handle facing up and the hinge pivots over the hinge base (Figure 2). Ensure that the flat sections of the hinge pivots are oriented vertically (Figure 3). Lower the lid hinge pivots into the hinge base, then close the lid.

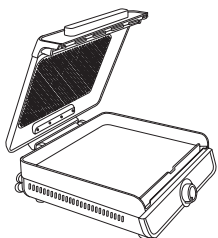 


Figure 1

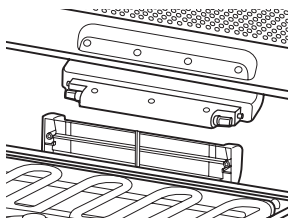 


Figure 2

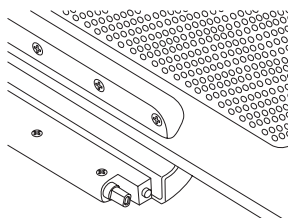 


Figure 3

## CLEANING YOUR GRILL AND FLAT PLATE

The unit should be cleaned thoroughly after each use. Always let the appliance cool before cleaning.

- 1 Unplug the unit from the socket before cleaning. Keep the lid open after removing your food to allow the unit to cool quicker.
- 2 To prolong the nonstick coating of the grill and flat plate, we recommend handwashing in warm, soapy water then air or towel-drying all parts. We don't recommend putting the grill and flat plate in the dishwasher. The splatter lid is dishwasher safe.

- 3 If food residue or grease is stuck on the grill, flat plate, splatter lid, or any other removable part, soak in warm, soapy water before cleaning.
- 4 To clean around the heating element of the grill, use a damp, soapy cloth, then wipe with a clean, damp cloth and dry thoroughly.

**NOTE: NEVER** use abrasive tools or cleaners. **NEVER** immerse the main unit in water or any other liquid. Do not place in dishwasher.

## TROUBLESHOOTING GUIDE

- **Why is the unit emitting smoke?**  
When using the grill, always select the recommended temperature. Recommended temperatures can be found in the Quick Start Guide. Make sure the splatter lid is down.

## ACCESSORIES FOR PURCHASE

We offer a suite of custom-made accessories for your Ninja Sizzle Grill and Flat Plate. Visit [ninjakitchen.co.uk](http://ninjakitchen.co.uk) to expand your capabilities and take your cooking to the next level.

# MANUFACTURER'S GUARANTEE

---

## The Ninja 2 Year Guarantee

When a consumer buys a product in the UK, they get the benefit of legal rights relating to the quality of the product (your "legal rights"). You can enforce your legal rights against your retailer, including Ninja if you bought your Ninja kitchen appliance from ninjakitchen.co.uk. However, at Ninja we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

## How long are new Ninja machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days.

## How do I register my Ninja guarantee?

If you have purchased your Ninja kitchen appliance directly from ninjakitchen.co.uk your guarantee is registered automatically. If you bought it from anywhere else in the UK, you can register your guarantee online within 28 days of purchase.

- To register online, please visit [www.ninjakitchen.co.uk/register-guarantee](http://www.ninjakitchen.co.uk/register-guarantee) or scan the QR code on the back cover.
- Keep a note of the date you purchased the machine.

## IMPORTANT:

- Keep your receipt if you bought your Ninja kitchen appliance from anywhere except ninjakitchen.co.uk. You will need it to claim under your guarantee.
- The free Ninja guarantee only applies in the UK.

## What are the benefits of registering my free Ninja guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Ninja kitchen appliance and hear the latest news about new Ninja technology and launches.

## What is covered by the free Ninja guarantee?

Repair or replacement (at Ninja's discretion) of your Ninja machine, including all parts and labour.

## What is not covered by the free Ninja guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Ninja kitchen appliance which is not in accordance with the Ninja Operating Manual supplied with your machine.
- Damage caused by use of the Ninja kitchen appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.

- Damage caused by use of parts and accessories which are not Ninja Genuine Components
- Faulty installation (except where installed by Ninja).
- Repairs or alterations carried out by parties other than Ninja or its agents.

## How can I claim under the free Ninja guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website under 'Contact Us'. It's free to call, and you'll be put straight through to a Ninja representative. You'll also find online support at <https://support.ninjakitchen.co.uk/>. The Ninja representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us. It can be any suitable box, it does not have to be the original packaging.

## Where can I buy genuine Ninja spares and accessories?

Ninja spares and accessories are developed by the same engineers who developed your Ninja kitchen appliance. You'll find a full range of Ninja spares, replacement parts and accessories for all Ninja machines at [www.ninjakitchen.co.uk](http://www.ninjakitchen.co.uk). Please remember that damage caused by the use of non-Ninja spares may not be covered under your guarantee.