

THANK YOU

for purchasing the Ninja Sizzle PRO XL Indoor Grill + Flat Plate



REGISTER YOUR PURCHASE



registeryourninja.co.uk



Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60 Hz

Watts: 1800W

Standby mode power
consumption: 0,4 Watt

The period after which the
equipment reaches automatically
standby mode: ~10 minute

SharkNinja Europe Ltd,
1st/2nd Floor Building 3150,
Thorpe Park, Century Way,
Leeds, England,
LS15 8ZB
ninjakitchen.co.uk

SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany
ninjakitchen.eu

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA and NINJA SIZZLE are registered trademarks in the United Kingdom of SharkNinja Operating LLC.

© 2025 SharkNinja Operating LLC
PRINTED IN CHINA

GX101UK_Series_IB_MP_Mv1_250314



@ninjakitchenuk

TIP: You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.



This marking indicates this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

NINJA

NINJA SIZZLE PRO XL INDOOR GRILL + FLAT PLATE GX101UK | Instructions



IMPORTANT SAFETY INSTRUCTIONS

INDOOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE



Read and review instructions to understand operation and use of product.



Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.



Avoid contact with hot surface. Always use hand protection to avoid burns.



For indoor and household use only.

⚠ WARNING To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- 1 To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- 2 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 3 Keep the appliance and its cord out of reach of children. **DO NOT** allow children to play with or use the appliance. Close supervision is necessary when used near children.
- 4 This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Misuse may cause injury.
- 5 To reduce the risk of fire, **DO NOT** place on or near a hot gas or electric burner or in a heated oven.
- 6 Ensure the surface is level, clean and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
- 7 **ALWAYS** ensure the appliance is properly assembled before use. **DO NOT** place appliance on or near a gas oven or electric stovetop, or in a heated oven
- 8 When using this appliance, provide at least 6 inches (15.25cm) of space above and on all sides for air circulation.
- 9 **DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- 10 **NEVER** connect this appliance to an external timer switch or separate remote-control system.
- 11 To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

- 12 DO NOT** use the appliance if there is damage to the power cord or plug. Regularly inspect the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
- 13 NEVER** use socket below worktop surface.
- 14 DO NOT** place appliance and let cord hang over edges of tables, worktops or touch hot surfaces.
- 15** Only use recommended accessories included with this appliance or authorised by SharkNinja. The use of accessories or attachments not recommended by SharkNinja may cause a risk of fire or injury.
- 16** Before placing any accessory on the grill, ensure they are clean and dry.
- 17 DO NOT** move the appliance when in use or when hot oils and hot liquids are in the product
- 18 DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven gloves and use available handles and knobs.
- 19 DO NOT** touch accessories during or immediately after cooking. The grill plates become extremely hot during the cooking process. Avoid physical contact while removing these from the appliance. To prevent burns or personal injury **ALWAYS** use care when using the product. Recommend use of long-handled utensil and protective hot pads or insulated oven gloves.
- 20 DO NOT** use this appliance for deep-frying.
- 21** To prevent possible illness, **ALWAYS** use a food thermometer to check that your food is cooked to the recommended temperatures.
- 22** Should a grease fire occur or the unit emits black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.
- 23** Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
- 24** To disconnect, turn unit to “OFF,” then unplug from socket when not in use and before cleaning.
- 25** Allow to cool before cleaning, disassembling, putting in or taking off parts, or storing.
- 26 DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 27** The supply cord cannot be replaced. If the cord is damaged the appliance should be responsibly disposed of as electronic waste.
- 28** Please check online at ninjakitchen.co.uk for the most up to date version of this instruction booklet.
- 29** Cleaning and use maintenance shall not be done by children.

SAVE THESE INSTRUCTIONS.

GETTING TO KNOW THE NINJA SIZZLE PRO XL INDOOR GRILL AND FLAT PLATE



BEFORE FIRST USE

- 1** Remove and discard any packaging material, stickers, and tape from the unit.
- 2** Remove all accessories from the package and carefully read the manual before use. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3** Wash the grill plate with a damp, soapy cloth, then wipe with a clean, damp cloth and dry thoroughly. **NEVER** submerge the main unit in water.
- 4** We recommend turning the unit on and running it on 260°C for 10 minutes without adding food. Make sure the area is well ventilated. This removes any packaging residue and odor traces that may be present. This is completely safe and not detrimental to the performance of the grill.

HOW TO HAVE LOW-SMOKE EXPERIENCE

Always use the recommended grill settings. Our chef-designed temperature settings maximize grill flavors and textures while minimizing smoke.

160°C	175°C	200°C	260°C
When using thicker barbecue sauces	Frozen meats Burgers	Hotdogs Fried eggs Grilled cheese Chicken Bacon	Veggies Fruit Fresh/Frozen seafood Steak

If using oil or fat during the cooking process, we recommend using oils with high smoke points. For best results, Sunflower, Refined Coconut, Avocado, Vegetable, or Grapeseed oils are recommended. Olive Oil, Butter, Margarine, or aerosol cooking sprays are NOT recommended.

COOKING WITH GRILL/FLAT PLATE MODE

- 1

To install the grill or flat plate, position it over the base with the grease chimney toward the front. Place the grill plate down, ensuring the sides align with the exterior of the base.
- 2

Make sure the unit is plugged in, push the power button.
- 3

The unit will default to Grill/Flat Plate Mode.
- 4

Use the dial to select Low, Medium, High, or Sear (Grill only), or use the TempIQ to turn the dial to your specific temperature.
- 5

Press the Time button and use the dial to program your time. When finished, press the START/STOP button to start preheating.
- 6

After preheating is complete, the unit will beep and display “ADD FOOD”. Push the START/STOP button to start the timer, or wait 15 seconds and it will start automatically.

NOTE:

Ninja Sizzle Pro XL Indoor Grill and Flat Plate can be used with the lid open or closed.

CUSTOM TEMP INSTRUCTIONS

- 1

To install the grill or griddle plate, position it over the base with the grease chimney toward the front. Place the grill plate down, ensuring the sides align with the exterior of the base.
- 2

Make sure the unit is plugged in, push the power button.
- 3

Use the Mode button to select Custom Temp.
- 4

The unit will default to 180C. Use the dial to choose your desired temperature from a range of 160-260C.
- 5

Press the Time button and use the dial to program your time. The unit will default to 15 minutes. When finished, press the START/STOP button to start preheating.
- 6

After preheating is complete, the unit will beep and display “ADD FOOD”. Push the START/STOP button to start the timer, or wait 15 seconds and it will start automatically.

INSTALLING AND REMOVING THE SPLATTER LID

- 1

After allowing the unit to cool, remove the lid by opening it until it is approximately vertical. Then lift the lid straight up out of the hinge base.
- 2

To install the lid, hold it vertically with the handle facing up and the hinge pivots over the hinge base. Ensure that the flat sections of the hinge pivots are oriented vertically. Lower the lid hinge pivots into the hinge base, then close the lid.

CLEANING YOUR GRILL

- The unit should be cleaned thoroughly after each use. Always let the appliance cool before cleaning.
- 1

Unplug the unit from the wall outlet before cleaning. Keep the lid open after removing your food to allow the unit to cool quicker.
- 2

To prolong the nonstick coating of the grill plate, we recommend hand-washing in warm, soapy water then air- or towel-drying all parts. The splatter lid is dishwasher safe.
- 3

If food residue or grease is stuck on the grill plate, splatter lid, or any other removable part, soak in warm, soapy water before cleaning.
- 4

To clean the base heating unit of the grill, use a damp, soapy cloth, then wipe with a clean, damp cloth and dry thoroughly.

NOTE:

When cleaning the grease catch, let the oil cool and then easily scrape off.

NOTE: NEVER

use abrasive tools or cleaners. NEVER immerse the main unit in water or any other liquid. Do not place in dishwasher.

TROUBLESHOOTING GUIDE

- Why is the unit emitting smoke?

When using the Grill function, always select the recommended temperature setting. Recommended settings can be found in the Quick Start Guide and in the Inspiration Guide. Make sure the splatter shield is installed.

ACCESSORIES FOR PURCHASE

We offer a suite of custom-made accessories for your Ninja Sizzle Pro XL Indoor Grill. Visit ninjakitchen.co.uk to expand your capabilities and take your cooking to the next level.

MANUFACTURER'S GUARANTEE

The Ninja 2 Year Guarantee

When a consumer buys a product in the UK, they get the benefit of legal rights relating to the quality of the product (your "legal rights"). You can enforce your legal rights against your retailer, including Ninja if you bought your Ninja kitchen appliance from ninjakitchen.co.uk. However, at Ninja we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

How long are new Ninja machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days.

How do I register my Ninja guarantee?

If you have purchased your Ninja kitchen appliance directly from ninjakitchen.co.uk your guarantee is registered automatically. If you bought it from anywhere else in the UK, you can register your guarantee online within 28 days of purchase.

- To register online, please visit www.ninjakitchen.co.uk/register-guarantee or scan the QR code on the back cover.
- Keep a note of the date you purchased the machine.

IMPORTANT:

- Keep your receipt if you bought your Ninja kitchen appliance from anywhere except ninjakitchen.co.uk. You will need it to claim under your guarantee.
- The free Ninja guarantee only applies in the UK.

What are the benefits of registering my free Ninja guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Ninja kitchen appliance and hear the latest news about new Ninja technology and launches.

What is covered by the free Ninja guarantee?

Repair or replacement (at Ninja's discretion) of your Ninja machine, including all parts and labour.

What is not covered by the free Ninja guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Ninja kitchen appliance which is not in accordance with the Ninja Operating Manual supplied with your machine.
- Damage caused by use of the Ninja kitchen appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.

- Damage caused by use of parts and accessories which are not Ninja Genuine Components
- Faulty installation (except where installed by Ninja).
- Repairs or alterations carried out by parties other than Ninja or its agents.

How can I claim under the free Ninja guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website under 'Contact Us'. It's free to call, and you'll be put straight through to a Ninja representative. You'll also find online support at <https://support.ninjakitchen.co.uk/>. The Ninja representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us. It can be any suitable box, it does not have to be the original packaging.

Where can I buy genuine Ninja spares and accessories?

Ninja spares and accessories are developed by the same engineers who developed your Ninja kitchen appliance. You'll find a full range of Ninja spares, replacement parts and accessories for all Ninja machines at www.ninjakitchen.co.uk. Please remember that damage caused by the use of non-Ninja spares may not be covered under your guarantee.