

NINJA[®]

JC100UK

INSTRUCTIONS

COLD PRESS JUICER



THANK YOU

for purchasing the Ninja® Cold Press Juicer



REGISTER YOUR PURCHASE

 ninjakitchen.co.uk/register-guarantee/

 Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~, 50-60Hz

Power: 150W

**PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.**

TIP: You can find the model and serial numbers on the QR code label on the back of the unit by the power cord.

PRODUCT REGISTRATION

Please visit ninjakitchen.co.uk or call 0800 862 0453 to register your new Ninja® product within 28 days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification.

CONTENTS

Important Safety Instructions.....	4
Parts.....	6
Before First Use.....	7
Features.....	7
Using the Control Panel.....	7
Using the Filters for Pulp Control.....	7
Using the Juicer.....	8
Assembly.....	8
Juicing.....	9
Disassembly.....	9
Care & Maintenance.....	10
Cleaning.....	10
Storing.....	10
Overloading the Unit.....	10
Troubleshooting Guide.....	11

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

⚠ WARNING

To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.



- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 3 **DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- 4 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 5 Always make sure pulp spout is securely in place before motor is turned on. **DO NOT** unfasten parts while juicer is in operation.
- 6 Be sure to turn the appliance off after each use. Make sure the motor stops completely before disassembling.
- 7 Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- 8 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- 9 Before each use, inspect auger for damage. If the auger is bent or damage is suspected, contact SharkNinja to arrange for replacement.
- 10 **DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 11 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact SharkNinja for servicing.
- 12 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 13 Extension cords should **NOT** be used with this appliance.
- 14 To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- 15 **DO NOT** allow the cord to hang over the edges of tables or worktops. The cord may become snagged and pull the appliance off the work surface.
- 16 **DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- 17 **ALWAYS** use the appliance on a dry and level surface.
- 18 **DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 19 This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- 20 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 21 **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 22 **DO NOT** put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use the tamper or another piece of fruit or vegetable to push it down. If the feed chute chamber becomes blocked or ingredients are not processing, press and hold REVERSE. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
- 23 Keep hands, hair, and clothing out of the container when loading and operating.
- 24 During operation and handling of the appliance, avoid contact with moving parts.
- 25 **DO NOT** use the appliance if the rotating sieve is damaged.
- 26 **DO NOT** operate the appliance without the pulp container in place.
- 27 **DO NOT** microwave container or accessories provided with the appliance.
- 28 **NEVER** leave the appliance unattended while in use.
- 29 **DO NOT** juice hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- 30 **NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure attachments are properly installed before operation.
- 31 Before operation, ensure all utensils are removed from container. Failure to remove utensils can cause container to shatter and potentially result in personal injury and property damage.
- 32 **DO NOT** attempt to remove the feed chute chamber from the motor base while the auger is still spinning. Allow the appliance to come to a complete stop before removing attachments.
- 33 If the appliance is overloaded, the unit will temporarily disable the motor. Wait approximately 2 minutes before using again.
- 34 **DO NOT** juice hot ingredients.
- 35 Remove the seeds and stones from fruits such as mangoes or plums, as well as peels and tough skins from fruits such as oranges, lemons and limes, as they could damage the unit.
- 36 **DO NOT** add water to the feed chute while the unit is operating to clean the unit.
- 37 **DO NOT** submerge the motor base or control panel in water or other liquids.
- 38 **DO NOT** spray motor base or control panel with any liquid.
- 39 **DO NOT** attempt to sharpen auger.
- 40 Turn off the appliance and unplug the motor base before cleaning.
- 41 **DO NOT** add frozen fruit, frozen vegetables, or ice to the juicer.
- 42 Consumers with sensitivity to pulp may wish to strain their juice as a precaution.

SAVE THESE INSTRUCTIONS

PARTS

- A** Cleaning Brush
- B** Tamper
- C** Food Tray
- D** Feed Chute Chamber with Anti-Drip Lever
- E** Auger
- F** Black Filter (low pulp)
- G** Grey Filter (medium pulp)
- H** Orange Filter (high pulp)
- I** Inner Pulp Spout
- J** Outer Pulp Spout
- K** 470ml Juice Jug
- L** 710ml Pulp Container
- M** Motor Base (power cord not shown)

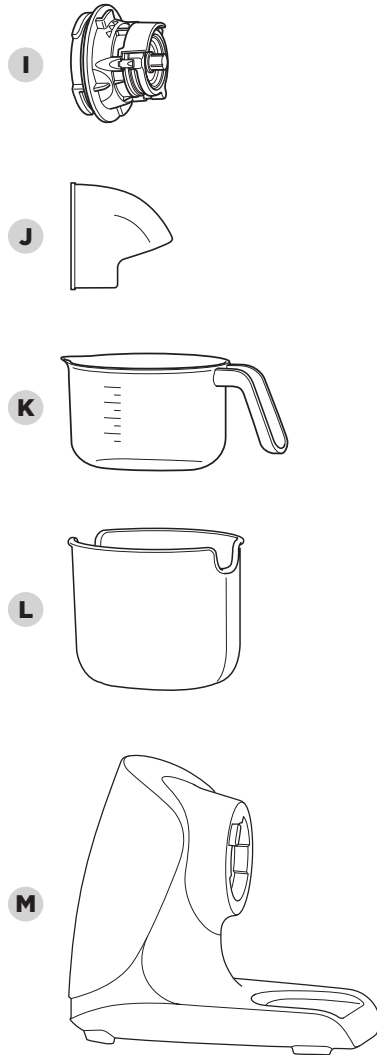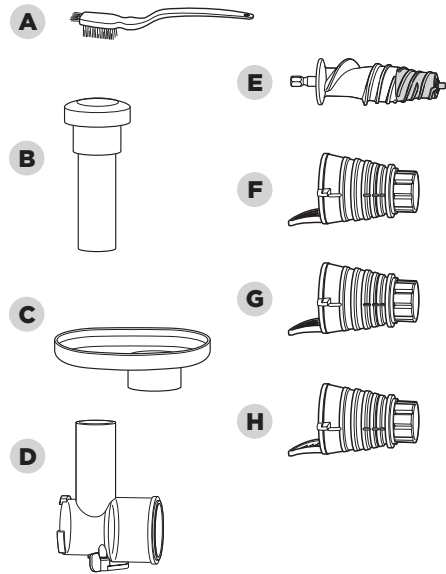

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit ninjakitchen.co.uk

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

NOTE: All attachments are BPA free and dishwasher safe.


- 1 Remove all packaging materials from the unit.

NOTE: The feed chute chamber (D), auger (E), orange filter (H) and 2-part spout (I,J) are pre-assembled.

- 2 Disassemble and clean all parts before first use. Wash parts in warm, soapy, water, then thoroughly rinse and air-dry all parts.
- 3 Wipe control panel with a soft cloth. Allow it to dry completely before using.
- 4 Assemble as per instructions on page 8.

FEATURES

USING THE CONTROL PANEL

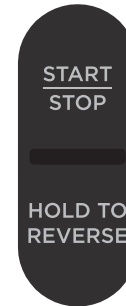

START/STOP


Press once to start continuous running up to 12 minutes; press again to stop.

REVERSE

If the feed chute chamber becomes blocked or ingredients are not processing, press and hold REVERSE. There will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release REVERSE to stop. Repeat as needed. Press START/STOP to resume normal operation.


USING THE FILTERS FOR PULP CONTROL

Control the amount of pulp by choosing the desired filter.

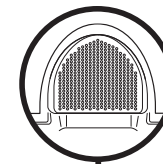


LOW PULP

Use the black filter with the finest mesh for juice with minimal pulp.

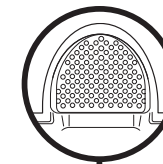

MEDIUM PULP

Use the grey filter with the larger mesh for juice with some pulp.

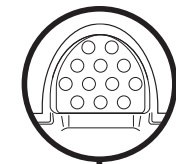

HIGH PULP

Use the orange filter with the largest mesh for juice with lots of pulp.


NOTE: For best results, we recommend using the **Grey (Medium Pulp)** or **Orange (High Pulp)** filter when processing soft fibrous fruits like berries (strawberries, blueberries), seeded melons and pineapple.

USING THE JUICER


ASSEMBLY

IMPORTANT: Review all warnings on pages 4-5 before proceeding.


- 1 Plug in motor base and place on a clean, dry, level surface such as a worktop or table.

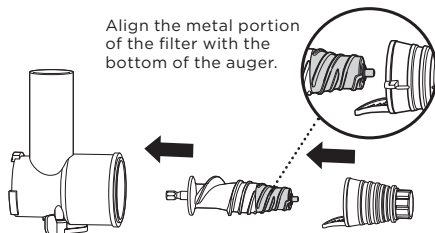


- 2 Insert the auger into the feed chute chamber, then attach the desired filter onto the auger, with the metal portion of the filter on the bottom of the auger.

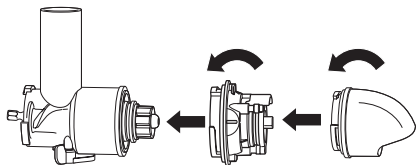


- 3 Attach the inner pulp spout to the feed chute chamber by installing at an angle, on top of the filter, then turning anti-clockwise to lock in place. Ensure the word Ninja is facing upwards. Then attach the outer pulp spout by installing at an angle, on top of the inner pulp spout, and turning anti-clockwise to lock in place.

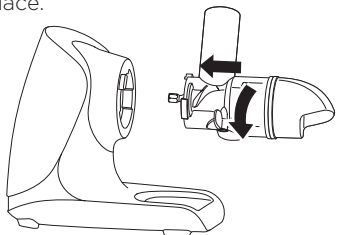

- 4 Install the assembled feed chute chamber on the motor base at an angle, then turn anti-clockwise until it clicks into place.

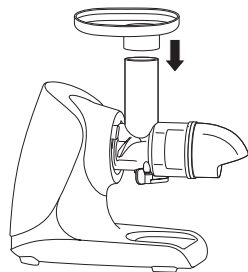


- 5 Install the food tray on the top of the feed chute.

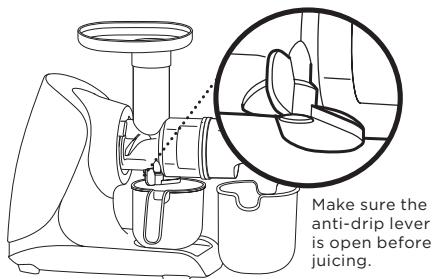

- 6 Place the pulp container under the pulp spout, then place the juice jug under the anti-drip lever on the feed chute chamber.

JUICING

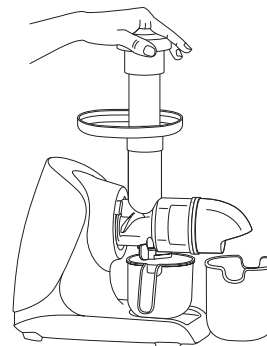


- 7 Select START/STOP, then gradually add ingredients to the feed chute. For best results, allow juicer to process each ingredient before adding more to the feed chute. Use the tamper to push ingredients down through the feed chute, as needed.
- 8 When juicing is complete, select START/STOP, then close the anti-drip lever. Stir juice and serve. Residual pulp will be deposited in the pulp container.

IMPORTANT: DO NOT add frozen fruits and vegetables or ice to the unit.


NOTE: If the feed chute chamber becomes blocked or ingredients are not processing, press and hold REVERSE. There will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release REVERSE to stop. Repeat as needed. Press START/STOP to resume normal operation.

NOTE: Refer to the Recipe Guide for ideas of how to use the leftover pulp.

DISASSEMBLY

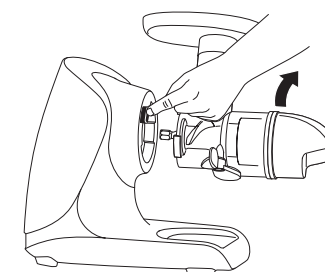

- 9 To disassemble, press and hold the RELEASE button while turning the feed chute chamber clockwise and remove from motor base.

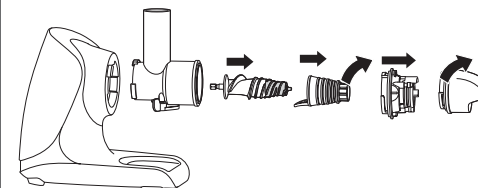

- 10 Remove the pulp spout from the feed chute chamber by turning clockwise to remove the outer pulp spout, then twist the inner pulp spout clockwise to remove. Remove the filter and auger by gently pulling out of the feed chute.
- 11 Unplug the unit when finished. If moving the unit, grab from the bottom of the base. Refer to the Care & Maintenance section for cleaning and storage instructions.

CARE & MAINTENANCE

CLEANING

IMPORTANT: DO NOT add water to the feed chute while the unit is operating to clean the unit.

• Hand-Washing

Rinse clean under running water, or for a deeper clean, wash parts in warm, soapy water. Use the included cleaning brush for hard-to-clean areas, such as the filter.

• Dishwasher

All parts, except the motor base, are dishwasher safe.


• Motor Base

Unplug the motor base before cleaning. Wipe with a clean, damp cloth.

DO NOT use abrasive cloths, pads or brushes to clean the base.

• Using the Cleaning Brush

Use the included cleaning brush to clean hard-to-reach places, as well as remove excess residue.

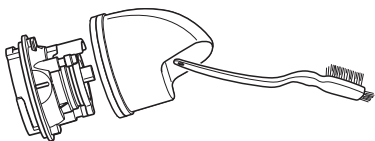

Use the end of the cleaning brush to clear any buildup left over after juicing.



Use the bristle side of the cleaning brush to clean the filter, if needed.

STORING

For cord storage, wrap cord with hook-and-loop fastener near the back of the motor base.

DO NOT wrap the cord around the bottom of the base for storage.

If moving the unit, grab from the bottom of the base. Store the auger and filter assembled in the feed chute chamber with the pulp spout installed. Place the juice jug into the pulp container for easy storage.

OVERLOADING THE UNIT

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload the motor. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, wait 2 minutes, then press START/STOP to start the unit.

TROUBLESHOOTING GUIDE

⚠ WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

The REVERSE program is not operating.

- After pressing and holding REVERSE, there will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release REVERSE to stop. Repeat as needed. Press START/STOP to resume normal operation. If the problem persists, disassemble and clean the pulp spout and/or filter to clear the clog. Reassemble the unit and resume juicing.

There is a build-up of pulp in the feed chute chamber.

- There may be a clog in the pulp spout. Press START/STOP to stop the unit, then remove the pulp spout. Use the end of the cleaning brush to clear the clog, then reinstall the pulp spout to the feed chute chamber. Resume juicing.
- For best results, allow juicer to process each ingredient before adding more to the feed chute. Use the tamper to push ingredients down through the feed chute, as needed.

The unit stopped working and is beeping.

- The unit was overloaded with ingredients. Wait 2 minutes then press START/STOP to start the unit.

Can I juice fruit with seeds and stones in it?

- No. Seeds and stones should be removed from the fruit prior to juicing. For example, remove the seeds from cherries and the stone from a plum.

Can I juice frozen fruits and vegetables or add ice?

- No, do not use frozen fruit, frozen vegetables or ice with this unit.

The unit makes a squeaking noise when I juice certain ingredients.

- When the auger is breaking down fibrous ingredients like apples, celery, herbs and leafy greens, the unit will sometimes make this noise. This is normal and not a cause for concern.

There is clogging in the pulp filter.

- When juicing solely fibrous ingredients, such as pineapple, you may have to clear the filter of pulp more often, especially when using the low pulp filter.

The unit is producing less juice than I anticipated based on the amount of produce I used.

- With the Ninja Juicer, you can extract up to 75% of the fruit. Yield may vary depending on produce, season and ripeness.
- Depending on the seasonality of ingredients, you may experience lower juice and pulp yield when using the Low Pulp Filter. If this occurs, try using the Medium Pulp Filter.

VISIT US ONLINE AT:

ninjakitchen.co.uk

Or follow us on any of our social media pages:



This marking indicates this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

SharkNinja Europe Limited
3150 Century Way
Thorpe Park, Leeds
LS15 8ZB, UK
ninjakitchen.co.uk

SharkNinja Germany GmbH,
c/o Regus Management GmbH
Excellent Business Center 10
+11/Stock Westhafenplatz 1,
60327 Frankfurt am Main,
Germany
ninjakitchen.eu

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of Shark Ninja Operating LLC.

© 2021 SharkNinja Operating LLC

PRINTED IN CHINA

JC100UK_IB_MP_211220_MP_MVI

