

NINJA®

KT200UK
Series

INSTRUCTIONS

PERFECT TEMPERATURE KETTLE




THANK YOU FOR PURCHASING

Ninja® Perfect Temperature Kettle



REGISTER YOUR PURCHASE

 ninjakitchen.co.uk/register/guarantee/

 Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240~, 50-60Hz

Power: 2520W - 3000W

**PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.**

CONTENTS

Important safeguards	4
Parts	6
Before first use	7
Getting to know your kettle	8
Using your kettle	9
Cleaning and maintenance	11
Troubleshooting	11
FAQ	11

TIP: You can find the model and serial numbers on the QR code label located on the back of the unit by the power cord.

PRODUCT REGISTRATION:

Please visit ninjakitchen.co.uk or call 0800 862 0453 to register your new Ninja® product within 28 days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address. The registration will enable us to contact you in the unlikely event of a product safety notification.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD AND WORKTOP USE ONLY






Read all instructions before using your Ninja® Perfect Temperature Kettle

⚠ WARNING

To reduce the risk of fire, electric shock, serious injury, death or damage when using this appliance, follow these basic safety precautions.

- 1** To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- 2** This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 3** Keep the appliance and its cord out of reach of children. **DO NOT** allow children to play or use the appliance. Close supervision is necessary when used near children.
- 4** To protect against fire, electric shock, and injury to persons, **DO NOT** immerse cord, plugs, or body of machine in water or other liquid.
- 5** **NEVER** carry the appliance by the power cord or pull it to disconnect from electrical socket; instead grasp the plug and pull to disconnect.
- 6** A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- 7** **DO NOT** use extension cords, external timers or separate remote-control systems with this product. Regularly inspect the power cord.
- 8** **DO NOT** operate the kettle with a damaged cord or plug, or after the appliance malfunctions, or has been dropped or damaged in any manner. Contact SharkNinja Europe Limited for service.
- 9** For household use only.
- 10** **DO NOT** let the power cord hang over the edge or touch hot surfaces such as the stove.
- 11** **NEVER** use socket below worktop.
- 12** **ALWAYS** place kettle on base first, then plug cord into outlet.
- 13** To avoid risk of fire, electrical shock, or damage to the unit, **DO NOT** use unit in an appliance garage or under a wall cabinet.
- 14** Turn off and allow to cool before putting on or taking off parts, and before cleaning the appliance
- 15** Unplug from outlet when not in use and before cleaning.
- 16** **DO NOT** use kettle with any other base.
- 17** **ALWAYS** use appliance on a clean, dry, level surface.
- 18** **DO NOT** place on or near a hot gas, electric or induction burner/hob or in a heated oven.
- 19** **DO NOT** use this appliance for anything other than its intended use.
- 20** **DO NOT** use outdoors.
- 21** To avoid scalding from steam and hot surfaces use handles. **DO NOT** touch metal surface or reach across top of spout and opened lid when operating.
- 22** **DO NOT** place kettle in microwave.

- 23** **DO NOT** drink directly from the kettle. Liquid from the kettle may be very hot.
- 24** **DO NOT** fill water reservoir with anything other than water, as other liquids may damage your kettle.
- 25** **DO NOT** overfill the water reservoir. Fill water only to the Max Fill line. If the kettle is overfilled, boiling water may be ejected.
- 26** **DO NOT** run the appliance without water. If activated without water, allow to cool minimum 10 minutes before filling.
- 27** Exceeding maximum water level capacity may cause overflow.
- 28** Kettle **MUST** remain upright when moving or carrying to avoid skin burns and scalding.
- 29** **DO NOT** place kettle or base in dishwasher.
- 30** **DO NOT** immerse kettle or base in water and prevent water spillage on the connector.
- 31** **DO NOT** clean with abrasive cleaners, steel wool pads, or other abrasive materials.
- 32** Allow the appliance to cool before removing any parts and before cleaning.
- 33** If the product is not operating properly, visit ninjakitchen.co.uk or contact SharkNinja Europe Limited for examination, repair, or adjustment.
- 34** Cleaning and user maintenance must not be done by children.
- 35** **DO NOT** use the kettle to store food when not in use.
- 36** **CAUTION** The heating element surface is subject to residual heat after use.
- 37** **CAUTION** Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.

	Indicates to read and review instructions to understand operation and use of product.
	Do not immerse in liquid.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Take care to avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

SAVE THESE INSTRUCTIONS

PARTS

- A** Spout with removable limescale filter
- B** Cool-touch lid closure
- C** Lid release button
- D** Water level gauge 1.7L capacity
- E** 360° swivel base
- F** Control panel




To order additional parts and accessories, visit ninjakitchen.co.uk or contact customer service at **0800 862 0453**

BEFORE FIRST USE

- 1** Remove and discard any packaging material, promotional labels and tape from the unit.
- 2** Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings and important safeguards to prevent any injury or property damage.
- 3** Press the lid release button to open the lid and fill the kettle with water to MAX 1.7 (7 cups) line.
- 4** Close the lid by pressing the cool-touch pad until it locks closed.
- 5** Make sure the power base is plugged in, then place the kettle on the base, ensuring it is seated correctly.
- 6** Press the 100°C Boil button on the display, then press START/STOP to begin the heating process.
- 7** Once the water reaches 100°C, the kettle will beep that it has finished.
- 8** Lift the kettle off the base and discard the water to ensure the kettle is clean and ready for use.

GETTING TO KNOW YOUR KETTLE

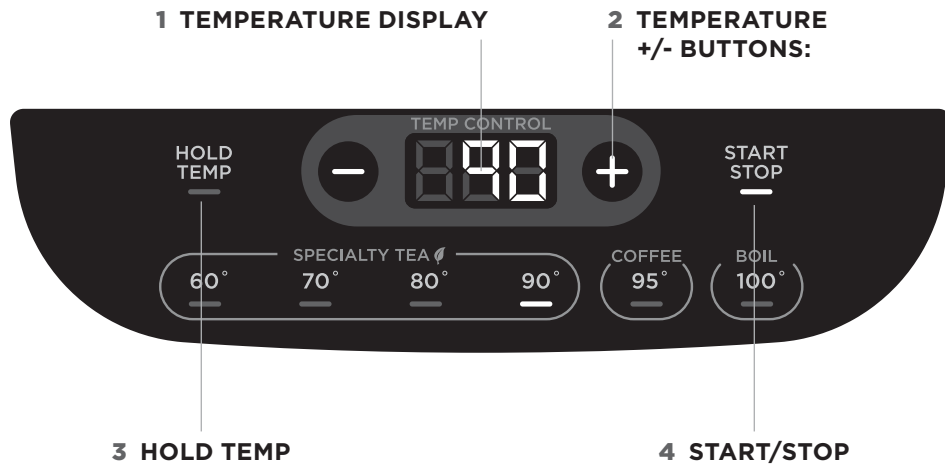

FUNCTIONS

Pre-Set Temperatures:

60°C	} SPECIALITY TEA
70°C	
80°C	
90°C	
95°C	COFFEE
100°C	BOIL

NOTE: For best results, fill to at least 500ml when heating below 70°C. Temperature accuracy +/- 3°C.

CONTROL PANEL DISPLAY & OPERATING BUTTONS

1 Temperature Display:

Shows the selected temperature and live temperature read-out.

2 Temperature +/- Buttons:

Press to increase or decrease the temperature selection in 5°C increments from 40°C to 100°C.

3 Hold Temp:

Press at the beginning, during or at the end of a program to hold your selected temperature for up to 30 minutes.

4 START/STOP:

Press to begin a heating cycle. Press again to stop heating.

NOTE: A program will automatically stop once the selected temperature has been reached.

USING YOUR KETTLE

To turn on the unit, unwind the right amount of cable from the base cable tidy and plug the power cord into the socket.

The energy consumption of the kettle can be optimised by ensuring that only the required amount of water is heated.

NOTE: The temperature displayed will always return to the temperature last selected when the kettle was in use.

POWERING OFF: The control panel will automatically enter a sleep mode if no activity is recognised for a period of 5 minutes. To manually turn off the control panel, press and hold START/STOP for 3 seconds. Press anywhere on the control panel to waken or lift the kettle off the base.

HEATING WATER


Only boil water inside the kettle. Never heat or boil any other liquids. Never steep tea or coffee directly in the kettle.

- 1 Fill the kettle with fresh water through the open lid (press lid release button to open).
- 2 Check the desired amount of water by reading the water level indicator. Always fill between the min. 250ml and max. 1.7L level.

NOTE: The min. 250ml level measure is inside the kettle. Water level on the exterior shows 500ml to 1.7L.

NOTE: Always fill to the minimum fill level 250ml and do not exceed maximum fill level 1.7L.

- 3 Ensure the lid is clicked into place and position the kettle securely onto the base. Do not open the lid during a heat cycle.

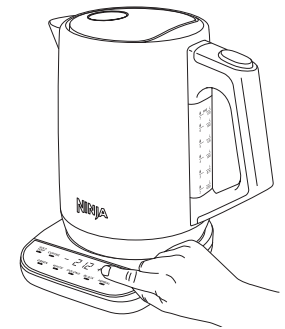

- 4 Select your desired temperature on the control panel.

Presets: Select one of the pre-set temperatures (60, 70, 80, 90, 95, 100°C)

Custom: Press the +/- to manually set the temperature in 5°C increments from 40°C to 100°C

- 5 Press START/STOP. The button will illuminate orange, the water level indicator will light up and you will hear an audio beep to signal the heating cycle has started.

NOTE: The display will show the temperature as it climbs during the heat cycle.

NOTE: To change the temperature mid-cycle, press the desired preset or +/- buttons and the display will flash for 5 seconds with the new target temperature. To cancel the heating cycle at any time, press START/STOP.

USING YOUR KETTLE - CONTINUED

6 When the water has reached the selected temperature the kettle will beep and automatically switch off. If Hold Temp is selected, the kettle will continue to hold the temperature for up to 30 minutes.

NOTE: If the kettle is lifted from the base during a heat cycle, this will cancel the cycle.

NOTE: To mute the kettle, press and hold the HOLD TEMP and - buttons for 5 seconds.

HOLD TEMP

Hold Temp is the kettle's ability to maintain the selected temperature for up to 30 minutes, after the heating cycle. Select Hold Temp any time before, during, or within 30 seconds of completion of a heating cycle to turn it on. Press Hold Temp again to turn it off. While the feature is on, Hold Temp will illuminate orange on the control panel. After 30 minutes of holding the temperature, the kettle will automatically shut off.

NOTE: The HOLD TEMP will only activate after the water has reached the target temperature. If HOLD TEMP is pressed before a heating cycle, you must first start a heating cycle.

NOTE: If 100°C Boil is selected the temperature will hold at 93°C for up to 30 minutes.

BOIL DRY PROTECTION

If the kettle has insufficient water when starting a heating cycle, the kettle will automatically switch off to protect from overheating and causing damage. The kettle beep and the temperature display will read "dry" to signify that the kettle has boiled dry. Allow the kettle to cool for at least 10 minutes before refilling.

CLEANING AND MAINTENANCE

WARNING: Never immerse the device, base or power cord in water or place in a dishwasher.

WARNING: Do not use chemicals or abrasive cleaners internally or externally.

- 1 Unplug the kettle and allow to cool down before cleaning.
- 2 Use a damp cloth to clean the exterior of the kettle and base. Only use non-abrasive cleaning materials.
- 3 The limescale filter can be easily removed. Open the lid and slide the filter up and out of the spout.
- 4 The filter can be cleaned by running under a hot water tap and rubbing with a cloth or brush.
- 5 To replace the filter, slide into place at the back of the spout, until it snaps in place.

DESCALING

Your kettle will not work properly if it is not descaled regularly. Regular descaling can increase the life of the kettle, allowing it to boil water faster and with less energy. Scale is a naturally occurring buildup of mineral deposits caused by impurities in water, especially hard water. The ideal frequency to descale depends on water hardness. Descaling can be completed with a descaling agent specifically designed for kettles. Follow the directions on the descaling agent package.

Or

- 1 Fill the kettle with equal parts water and white vinegar.
- 2 Let it sit for 30 minutes.
- 3 Discard solution and rinse the kettle with clean water.
- 4 Repeat this process until all deposits are removed.

TROUBLESHOOTING GUIDE

Power off the unit and call Customer Service at **0800 862 0453**. So we may better assist you, please register your product online at ninjakitchen.co.uk/registerguarantee and have the product on hand when you call.

FAQ

The power base won't turn on.

- Make sure the power cord is securely plugged into the socket.
- Insert the power cord into a different socket.

The kettle is not heating up.

- Overheat control has tripped. Let the kettle cool down.
- Ensure the kettle is fully seated on the power base.

Hold Temp function is not working

- The Hold Temp function is not default and needs to be turned on or off by pressing the Hold Temp button. When the function is on, the button will be illuminated orange. A heating cycle must be started to activate the Hold Temp feature. After turning on Hold Temp before a heating cycle, press START/STOP to begin the heating cycle.

The unit turns off before coming to target temperature.

- The kettle contains too much scale, refer to the descaling instructions.

Display messages:

dry: - There is an insufficient amount of water inside the kettle. Allow the kettle to cool for at least 10 minutes, then add fresh, room temperature water to at least the minimum 0.25 L marking and restart the heating cycle.

- If there is already water filled up to at least the minimum 0.25 L marking, please call Customer Service at **0800 862 0453**.

Er: - If the temperature display shows "Er" and then a number (ex. "Er 01"), contact Customer Service at **0800 862 0453**.

VISIT US ONLINE AT:

ninjakitchen.co.uk

Or follow us on any of our social media pages:



NOTE: Save these instructions. Keep for future reference.



This marking indicates this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

SharkNinja Europe Limited
3150 Century Way,
Thorpe Park, Leeds, LS15 8ZB, UK
0800 862 0453
ninjakitchen.co.uk

SharkNinja Germany GmbH, c/o Regus Management GmbH
Excellent Business Center 10. + 11/ Stock
Westhafenplatz 1, 60327 Frankfurt am Main, Germany

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of SharkNinja Operating LLC.

© 2021 SharkNinja Operating LLC

PRINTED IN CHINA

KT200UK_IB_MP_210915_Mv1

